



 







Operation no. of operation texts or standard texts and flat rates

Category	Op. no.	Operation text
P	024762	Connect/disconnect Diagnosis Assistance System (DAS)
P	025058	Connect/disconnect battery charger (with DAS connected)
P	025059	Read out and erase fault memory (with DAS connected)
P	025982	Check software for AIRmatic control unit (with DAS connected)
P	025983	Install software for AIRmatic control unit (after check)

	 List of affected vehicles		
		Model 221 from WDD2211281A151336 to WDD2211762A143555	SM32.22-P-0007-01AA
	Checking		
1	Connect DAS	 Use DAS version 02/2008 or a higher DAS version.  It is absolutely essential to closely follow the steps as per DAS.  Using battery charger ensure an adequate power supply (min. 12.5 V) of on-board electrical system battery.	AD00.00-P-2000-04A
2	Check software for AIRmatic control unit	 Select menu item "control unit programming".  New software available, continue with operation step 3. New software unavailable, finish measure.	
 	Remove/install		
3	Install software for AIRmatic control unit	 Continue "Control unit programming" menu item.	
4	Disconnect DAS		AD00.00-P-2000-04A