

DAIMLERCHRYSLER

DaimlerChrysler
India Private Limited

Pune, February 22, 2007

All Workshop Incharge
DC India dealerships / ASC

Service measure during next workshop stay
Repair water drains in both front wheel wells.
Model 211

Dear All,

Please be informed that on model series 211 vehicles (refer attached affected vehicle list) reporting to your workshop, both water drains of the air/water channel must be cleaned of contamination and the water drain grommets, if present, must be removed during the next workshop visit. Please note that the locations mentioned in the list are only indicative and any vehicle mentioned in the list visiting your workshop has to be attended for this Campaign.

Please refer to the attached work instructions for the procedures.

Parts required: None

For operation texts and flat rates, please refer to the attached work instructions.

Damage Code: 083941318


Cost settlement:

A warranty/goodwill claim for the costs labor can be submitted quoting **accounting number 8394131**.

Completion deadline

This field campaign should be completed by **31st July 2008**.

Please advise your concerned staff accordingly and ensure that each vehicle mentioned in the attached list visiting your workshop is attended for this action.

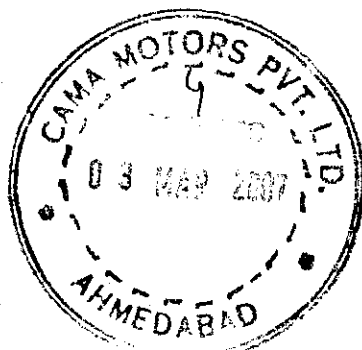


A Company of the DaimlerChrysler Group


Registered office, Corporate Office & Works
Sector 15-A, Chikhali
Pimpri, Pune 411 012 (India)
Phone: (+91) 20 27505000
www.mercedes-benz.co.in

Please acknowledge receipt of this letter and feel free to revert to us for any queries.

Thanking you

With best regards,
DaimlerChrysler India Private Limited


for D. Chandavarkar
Director
After-Sales


Ashish Salvi
Dy. General Manager
Field Service

Copy to - DCIPL Service Representatives } for close follow up with the workshops

Encl. - Work Instructions
Affected vehicle list - CD

WORK DESCRIPTION FOR SERVICE MEASURE

Code: 0611P83B19

Version: 2.2

Check right and left front water drain grommet, remove if necessary

Model 211; 219

Check/Test Procedure

1. Turn steering wheel all the way to the right.
2. Detach fender liner in area indicated and press to one side with assembly wedge (figure 1).

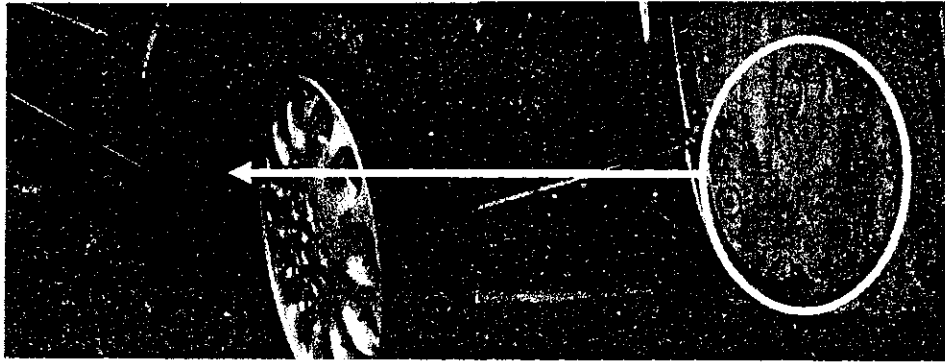


Figure 1

- a. If one of the grommets (A) is installed, carry out **work procedure** (figure 2).
- b. If **no** grommets (A) are installed, **end measure**.

Work Procedure

3. Remove grommet (A) (figure 2).
i Do **not** install a new grommet.

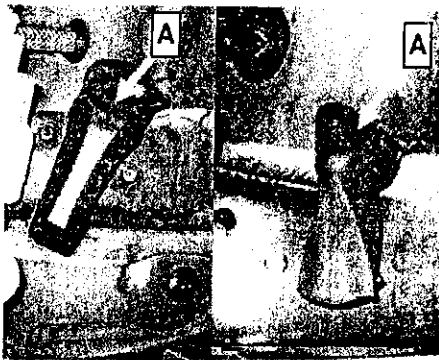


Figure 2 Different versions

4. Assemble in the reverse order.
i Carry out work on the other side in the same manner.

Operation Text and Flat Rate

Operation no.	Operation text	Flat rate	Accounting no
02557101	Check right and left front water drain grommet, remove if necessary	0.3 h	83 941 31

DaimlerChrysler AG
Global Service & Parts